

## adhesive mounting instructions

These instructions serve as a guide. The responsibility for recognizing and compensating for field conditions is with the installer.

### tools & materials

tools: screw gun, caulk gun, level, tape measure and pencil.

materials: all hardware and adhesives are included with the purchase of the panels

### installation steps

- 1) Wall surface should be clean, dry and free of any surface obstructions.
- 2) Using a level, layout where the panels will be installed across the entire wall surface. Lightly draw reference lines with a pencil as needed.
- 3) Install the provided leveling angles to the wall surface using the provided screws. Be certain the leveling angles are level to one another as these are the primary supports of the panel until the adhesive cures (figure A).
- 4) Confirm all measurements before cutting panels. Make all field cuts before installing. Please see our field cutting instructions on the previous page.
- 5) Lay the panel, fabric side down, on a clean, smooth surface. Apply 4 to 6 inch diameter dots of adhesive to random areas of the panel, around the perimeter and across the vertical and horizontal centers of the panel. (figure B)
- 6) Rest the bottom edge of the panel on the leveling angles and while using the reference lines as a guide, gently press the panel against the wall. Hold the panel in position for a few moments while the adhesive sets. (figure C)

figure A

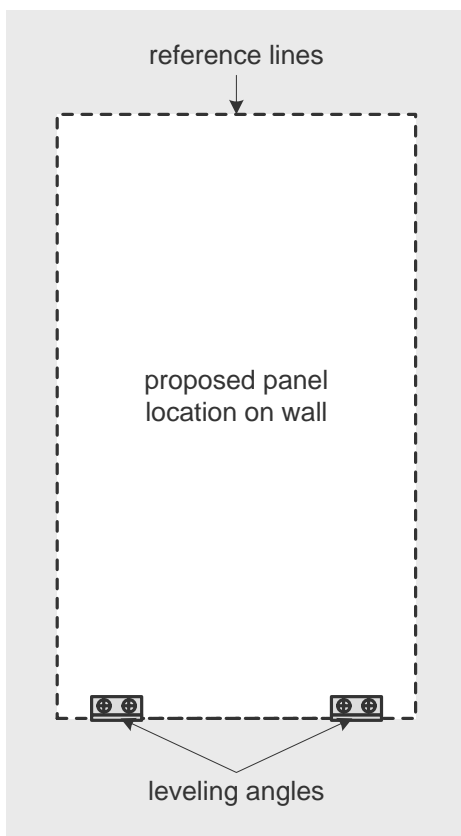


figure B

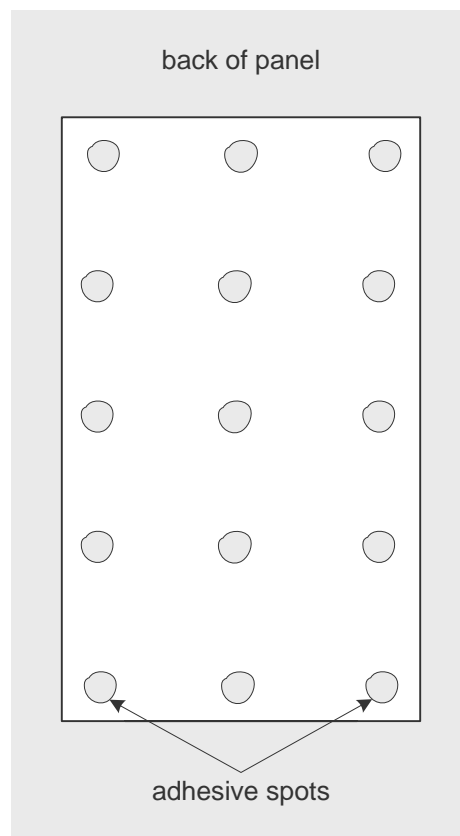


figure C

